Router D-Link 524

1. Pre nastavenie wifi v zariadení je nutné aby bolo zariadenie prepojené s PC sieťovým káblom, prípadne cez wifi

Pre vstup do nastavenia wifi je potrebné do internetového vyhľadávača namiesto www adresy vpísať 192.168.0.1 a stlačiť klávesu "enter"

2. Pre vstup do nastavení je potrebné zadať "Meno používateľa" a Heslo" a potvrdiť Router D-link má od výroby stanovené "Meno používateľa: admin heslo: (neuvádza sa žiadne)"

Program Internet Explorer nemôže zobraz	ziť webovú stránku	
Čo môžete skúsiť urobiť:		
Diagnostikovať problémy s pripojením		
Datšie informácie	Pripojiť k 192.168.0.1 Server 192.168.0.1 na DI-524 poľaduje meno používateľa a heslo. Upozomenie: Tento server poľaduje odoslanie mena používateľa a hesla nazbazeceleným spôsboom (základné overznie baz subspectoritko pripoveší Meno používateľa: Meno po	
	OK Zušť	

(Po správnom zadaní a potvrdení sa sprístupní samotné menu zariadenia)

3. V ponuke "Home" vyberte položku "Wireless" (Po zvolení sa otvoria ďalšie nastavenia)

4. Pre základné nastavenie treba preveriť nasledovné voľby (viď obrázok dolu)

pozn.: podstatné časti pre nastavenie wifi sú vyznačené červenou (na obrázku sú zobrazené všeobecné nastavenia pre aktívne wifi pripojenie s heslom pre prihlásenie)

	AirPlus G 802.11g/2.4GHz Wireless Router				
Home Wiretess Setting These are the wire	Advanced	Tools P(Access Point)	Status	Help	
Wireless Network ID(SSID) Channel Security Preshare Key	 Enabled satro WPA-PSK / V satro 	© Disabled WPA2-PSK ▼	Apply Ca	3 🔁 Incel Help	Názov (názov s zákazr He pripojen (zvolí zá
	Home Wireless Setting These are the wire Wireless Network ID(SSID) Channel Security Preshare Key	BO2. Home Mineless Settings These are the wireless settings for the AF Wireless Wireless Wireless Wireless © Enabled Network ID(SSID) Satro Channel Security WPA-PSK/W Preshare Key Satro	Air Book B	AirPice C Societary Construction Societary Construction Home Advanced Tools Status Minitess Settings These are the wireless settings for the AP(Access Point) portion. Wireless Network ID(SSID) Security Preshare Key Saturation Security Preshare Key Staturation Security Se	AirPeus C So2.11g/2.4GHz Wireless Router Home .dvanced Tools Status Help Miness Settings These are the wireless settings for the AP(Access Point) portion. Wireless Image: Setting Security Security Preshare Key Security WPA-PSK / WPA2-PSK I Preshare Key Security Image: Security Security Security Security Security Security Image: Security <